


HP170S57030S29E01 Spare Parts Diagram

5 stage cylinder with trunnion mount & spherical eye

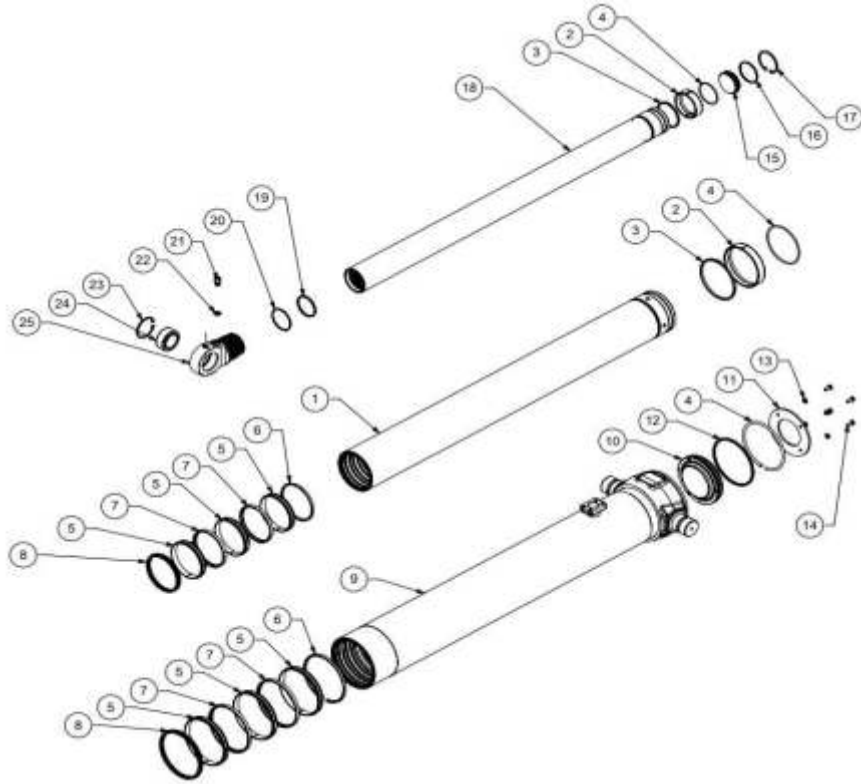

PARTS	REF	PART NUMBERS					
Base tube	9	HPBA191S29011660					
		1st Stage	2nd Stage	3rd Stage	4th Stage	5th Stage	
Inters	1	HPIN1690011650	HPIN1490011650	HPIN1290011650	HPIN1100011650		
Small Inner	18	HPSI091E0011650C					
Seal Kit		SKPB175/01 (SEALS ARE SOLD AS A KIT ONLY - INDIVIDUAL PARTS ARE UNAVAILABLE)					
		Base tube	1st Stage	2nd Stage	3rd Stage	4th Stage	5th Stage
Main Seals	7	SAM169/12	SAM149/12	SAM129/12	SAM110/12	SAM91/12	
Head Bearings	5	BRH169/12	BRH149/12	BRH129/12	BRH110/12	BRH91/12	
Wiper Seal	8	EWM169/12	EWM149/12	EWM129/12	EWM110/12	EWM91/12	
Base Pad Seal	12	OR161/5.33/N/70	OR161/5.33/N/90/AE				
Blanking Plug Seal	16	OR71/2.62/N/70	OR71/2.62/N/90/AE				
Cross Head Seals	19 & 20	OR73/3.53/N/70	OR69/3.53/N/70	OR69/3.53/N/90/AE			
		Base tube	1st Stage	2nd Stage	3rd Stage	4th Stage	5th Stage
Spring washer	13	WS550/M8/ZP					
Bolts	14	BM8/C/20/12.9/ZP					
Snap Ring	4	SRM175/02	SRM155/01	SRM135/01	SRM116/01	SRM97/01	SRM78/05
Internal Stop Ring	6	SRM180/07	SRM159/07	SRM139/07	SRM119/07	SRM81/07	
External Stop Ring	3		SRM163/06	SRM144/06	SRM124/06	SRM106/06	SRM87/06
Slider Bearing	2		BRS169/02	BRS149/02	BRS129/02	BRS110/02	BRS91/02
Locking Screw		KE74					
Cross Head	25	RCE91/01					
Bearing	24	BJ37					
Circlip	23	PS149/75					
Bleed Plug	21	PA39					
Dowty Washer	22	DPP45B/SC					
Base pad	10	RBM191/01					
Base Pad Ring	11	BPR191/01					
Blanking Plug	15	EC91/01					
Blanking Plug Clip	17	PS149/80					